



MOUNTAIN SERIES 1 BURNER BUTANE STOVE CARE, USE AND SAFETY INSTRUCTIONS



Portable Type Gas
2 Burner Stove
Conforms to ANSI STD Z21.72b-2002
Certified to CSA STD 11.2b-2002

- **To consumer: Keep this manual for future reference. This instruction manual contains important information necessary for the proper assembly and safe use of this product.**

Read and follow all warnings and instructions before assembling and using the appliance.

Follow all warnings and instructions when using the appliance.

DO NOT DISCARD THIS INSTRUCTION MANUAL.

For outdoor use only.

Model #: BDZ-138



FOR USE WITH NET WEIGHT 8OZ CANISTER.



PO Box 4057 • Logan, UT 84323
1.800.650.2433 or 1.435.752.3922



FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light the appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.


Never use this appliance in an enclosed space such as a camper, tent, car or home.



DANGER



STOVE FEATURES

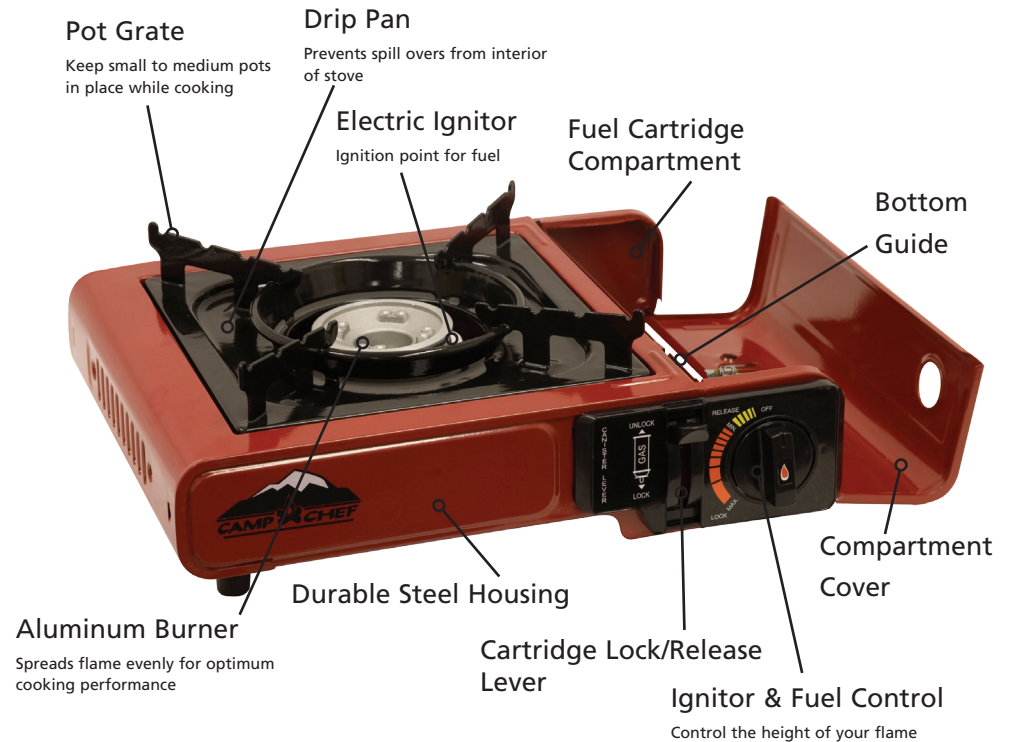

- DO NOT leave this appliance unattended while in use. The user must remain in the immediate area of the product and have a clear view of the product at all times during operation.
- Keep children and pets away from burner at all times.
- The use of alcohol, prescription or non-prescription drugs may impair your ability to properly assemble or safely operate this appliance.
- For OUTDOOR use only. Do NOT use in a building, garage or any other enclosed area. Do NOT use in or on recreational vehicles or boats. NEVER use this appliance as a heater. Use only in well ventilated areas.
- Do not operate appliance under ANY overhead construction. Keep a minimum clearance of 1 foot (0.3 m) from the sides, front and back of appliance to ANY construction. Keep the area clear of all combustible material and flammable liquids, including wood, dry plants and grass, brush, paper, and canvas. Never use this appliance within 25 ft. (7.5 m) of any flammable liquid.
- Use ONLY on a level, stable surface. Do not use this appliance on plastic case. Keep bottom away from dirt and sand. Do not use in direct sunlight
- DO NOT place an empty cooking vessel on burner while in operation. Use caution when placing anything in the cooking vessel while burner is in operation.
- Do NOT move the appliance when in use. Allow unit to cool to 115°F (45°C) before moving or storing.
- This appliance will be hot during and after use. Use insulated oven mitts or gloves for protection from hot surfaces or splatter from cooking liquids.
- In case there is a fire, call the local fire department or dial 911. Stay clear from flames. Do not attempt to extinguish an oil or grease fire with water.
- Do not obstruct the flow of combustion and ventilation air.
- Do not transport the stove with fuel cartridges inserted in stove.
- Do not let grease or other materials accumulate in the drip pan.

NOTE: This appliance is set to use 8 oz. disposable butane cartridges. Use only cartridges marked butane. Disposable butane cartridges must be disconnected from the stove when it is in storage. The LP-gas cartridge(s) used with this stove must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation or Transport Canada, CAN/CSA B339. Dispose of empty fuel cartridges in approved containers in accordance with local codes. Do Not incinerate.

- Do not modify this appliance. Modifications will result in a safety hazard. Questions regarding certification in other areas may be addressed to 1-435-752-3922.
- Apartment Dwellers: Check with management to learn the requirements and fire codes for using an LP Gas appliance at an apartment. If allowed, use outside on the ground floor with a 10 foot clearance from walls or rails.
- Do not block holes in bottom or sides of appliance.
- Storage of an appliance indoors is permissible only if the fuel cartridge is disconnected and removed from the appliance.
- To avoid overheating never use two stoves side by side. Do not use pots or pans that overhang the gas cartridge.

WARNING

Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

SETUP INSTRUCTIONS:

1. DRIP PAN INSTALLATION

Unpack stove and place on firm level surface. Clear area of all packing materials. Install drip pan properly by making sure the grooved Pot Grates are facing up and the pan is placed securely on the stove.



NOTE: Improper installation may result in a hazardous situation.

2. INSTALLING FUEL CARTRIDGE

Control knob must be in OFF position or cartridge will not install. Insert finger into round hole of compartment cover to pull open. Insert fuel cartridge by sliding the cartridge fuel nozzle into the stove nozzle receptacle. Make sure the opposite end of fuel cartridge is aligned properly to fit into the notch in the bottom guide.




3. FUEL COLLAR ALIGNMENT

Gently rotate the fuel cartridge until the notch flap is seated completely into the fuel collar notch.



4. LOCK IN FUEL CARTRIDGE

Slide lock-in/release lever all the way down until you feel a firm click.

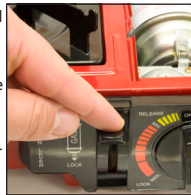

CAUTION: Forcing the lever down when the cartridge is not positioned properly may result in a hazardous situation.

NOTE: The lever will not push all the way down if:

- The collar flap is not seated properly into the notched fuel collar
- The flame control knob is not in the OFF position

Close fuel cartridge compartment cover.

Make sure the gas cartridge is installed correctly to avoid leaks.

Soapy water may be used to check for leaks. Do not use an open flame to check for leaks.

WARNING

- Do not put hands or any other body parts over the burner during lighting or when in use to prevent burns.

LIGHTING STOVE INSTRUCTIONS:

1. STOVE IGNITION

Twist flame height control knob firmly counter-clockwise toward the ON position until you hear a loud click. Blue flame should appear up from the aluminum burner.



NOTE: This step may be repeated a few times if the ignition is not instant however, make sure to return knob fully to OFF position after each attempt is made.

CAUTION: Leaving the control knob in any position other than OFF when the cartridge is installed but not in use will cause gas to escape from the fuel nozzle and may result in a hazardous situation. The stove must not be exposed to flammable vapors or liquids during lighting.

- If ignition does not occur in 5 seconds, turn the burner control(s) off, wait 5 minutes, and repeat lighting procedure. If built-in ignitor will not light follow the preceding steps and hold a lit long igniter or match next to the burner when opening the control valve.

3. OPERATING THE STOVE

Use the Flame Height Control Knob to adjust flame height to desired heat setting.



CAUTION: Never allow the flame to wash up the sides of a cooking vessel

4. EXTINGUISH THE FLAME

Twist Flame Height Control knob clockwise all the way to the OFF position.




NOTE: Make sure you twist knob fully until it cannot be pushed any further.

If the flame is accidentally extinguished, turn the appliance valves OFF and WAIT 5 minutes before attempting to ignite.

Burner Flame Check

- Light burner; rotate knob(s) from HIGH to LOW. You should see a smaller flame in LOW position than seen on HIGH. Always check flame prior to each use. A good flame should be blue with minimal yellow tip. Some yellow tips on flames are acceptable as long as no carbon or soot deposits appear.

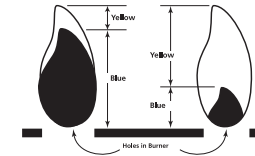

REMOVING CARTRIDGE

- Make sure control knob is in OFF position Raise release lever until it is positioned at the top of the slot. Insert finger into round hole of compartment cover to pull open. Grip fuel cartridge towards its bottom and pull up. Dispose of empty can or reuse remaining fuel later. Close fuel cartridge compartment cover.



CAUTION

All cleaning and maintenance should only be done when the appliance is cool and with the fuel cartridge removed. DO NOT clean any part in a self-cleaning oven. The extreme heat will damage the finish. Never Remove safety devices or gas components.

- REPACKING THE STOVE FOR STORAGE OR TRANSPORTATION

CAUTION: Wait until all parts of the stove have completely cooled and the fuel cartridge is removed before repacking into carry case.

Clean the drip pan to prevent free liquids or food from leaking into the internal stove mechanisms. Invert the drip pan and replace it carefully into the base. Place stove into carry case, close lid and lock tabs.



Cleaning The Burner

NOTE: Spiders and small insects can spin webs and build nests inside the burner. This especially occurs in late summer and fall before frost when spiders are most active. These nests can

obstruct gas flow and cause a fire in and around the burner and orifice. Such a fire can cause operator injury and serious damage to the appliance. To help prevent a blockage and ensure full heat output, clean and inspect burner tube often (once or twice a month). **NOTE:** Water or air pressure will not normally clear a spider web.

Cleaning and Maintenance

Correct care and maintenance will keep your appliance operating smoothly. Clean regularly as determined by the amount of use. **NOTE:** Clean the entire appliance each year and tighten all hardware on a regular basis (1-2 times a year or more depending on usage). Cleaning should be done where detergents won't harm patio, lawn, or the like. Keep appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids. Keep the ventilation opening(s) of the cylinder enclosure free and clear from debris.

Suggested Cleaning Materials

- Mild dish washing liquid detergent
- Wire brush
- Nylon cleaning pad
- Hot water
- Paper clip
- Soft brass bristled brush

Component Cleaning:

- Burner should be wiped clean. Hot soapy water and a soft bristle brush can be used to clean the burner surfaces. Clean clogged gas port holes with an opened paper clip. Replace corroded or damaged burners that would emit excess gas.
- COOKING SURFACES, POTS AND PANS: Clean the cooking surface with soapy water and a nylon cleaning pad.
- After appliance has cooled, wipe areas where paint and finish have burned off to minimize rusting.

LIMITED WARRANTY

To activate warranty, register on-line at: www.CampChef.com

The manufacturer warrants stove components (except paint and finish) to be free from defect in materials and workmanship for 1 year from the date of purchase. All accessories (included with stove or purchased separately) are warranted from defect in materials and workmanship for 90 days from the original purchasing date. Within these periods, the manufacturer will replace or repair defective parts deemed unusable from its original intent by making available the parts thereof FOB Logan, UT 84321. Product paint and finish is not warranted. The exterior finish of the product will wear down over time.

Clean the unit after each use to maintain the finish and prolong the life of your product. Wipe away all grease and ashes. Keep metal products free of moisture, salts, acids and harsh fluctuations in temperatures.

Warranty does not cover normal wear of parts or damage caused by misuse, abuse, overheating and alteration.

Repairs or alterations made by anyone other than Camp Chef are not covered in this Warranty. Manufacturer will not be held liable for any losses due to neglectful operation. Furthermore, this Warranty does not cover damaged caused by natural disasters such as earthquakes, hurricanes, tornadoes, floods, lightning, fires, etc.

Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied. Keep all original sales receipts. Proof of purchase is required to obtain Warranty services. Prior written approval and a Return Authorization Number must be obtained and accepted for repair or replacement only. Returns must be shipped prepaid. Collect shipment or shipments without a Return Authorization Number will not be accepted.

To obtain Warranty services call 1.800.650.2433.

*Warranty applies to the contiguous US states only.

YOUR RECIPE FOR FAMILY FUN™

CHECK OUT THESE ITEMS AND MORE AT WWW.CAMPCHIEF.COM



Propane Fire Ring
Model #: GCLOG



Camp/Stove Table
Model #: CT38



Popcorn Popper
Model #: CCP



Cast Iron Cooking Irons
Model #: DSPI / SSPI / RPI



Extendable Roasting Sticks
Model #: SRS4E



Steel Griddle
Model #: FG20



10" Dutch Oven
Model #: SDO10

All Accessories Are Available At www.campchef.com

See the full line of Mountain Series Products and Accessories at www.campchef.com



2 Mantle Lantern
Model: MSL2



Deluxe 2 Mantle Lantern
Model: MSL2D



Deluxe 3 Mantle Lantern
Model: MSL3D



Mountain Series Carry Bags
Model: CBMS/CBMSL

t e t o n
mountain series



Teton 2 Burner Stove
Model: MS2

r a i n i e r
mountain series



Rainier 2 Burner Grill/Stove Combo
Model: MS2G

d e n a l i
mountain series



Denali 3 Burner Grill/Stove Combo
Model: MS3G



CAMP CHEF
 THE WAY TO COOK OUTDOORS™

To see the whole line of Family Fun Camp Chef gear and accessories go to

www.campchef.com



3 Burner Stoves & Grills



Smokers



2 Burner Stoves & Griddles



Ovens



Single Burner Stoves



Cast Iron

