

THIS INSTRUCTION MANUAL CONTAINS IMPORTANT INFORMATION NECESSARY FOR THE PROPER ASSEMBLY AND SAFE USE OF THIS PRODUCT.
CETTE NOTICE CONTIENT DES RESEIGNEMENTS IMPORTANTS PERMETTANT UN ASSEMBLAGE ADÉQUAT ET À UNE UTILISATION SÉCURITAIRE DE L'APPAREIL.



Weekender

Read and follow all warnings and instructions in included instruction manual before assembly and use of appliance.

Lisez et suivez attentivement toutes les instructions dans le manuel d'instructions fourni avant le montage et l'utilisation de l'appareil.

Model: DJ60LW

- Two 40,000 BTU Cast Aluminum Burners
- Suitcase Style Lid Design
- Detachable Legs
- Convenient Cooking Height



Tank Sold Separately

DJ60 INSTRUCTIONS AND TROUBLE SHOOTING

1. Open stove lid, remove, grate and retrieve legs from the inside of the stove. Reinstall the grate.
2. Turn stove upside down and assemble leg extensions to stove as shown by inserting the threaded bolt on the legs into the threaded fastener on the corner of the stove and tightening. (See Fig. 1)
3. Stand stove upright. Open lid. Fold windscreens out and locate the tab on the windscreens into the cutout on the top edge of the stove. Use the latch to hold the windscreens in place. (See Fig. 2)

BURNERS WILL NOT IGNITE

1. Make sure there is propane in the tank and turn propane tank is turned on.
2. Follow all instructions in instruction manual for lighting the burner

YELLOW FLAME

1. Adjust Air Shutter until burner has blue flame - Some yellow tipping of the flame is normal.
2. See Instruction Manual for Cleaning the burner

FLAME IS VERY SMALL AND WON'T INCREASE.

1. Make sure there is propane in the tank and turn propane tank is turned on a minimum of 3 full turns
2. Follow all instructions in manual for leak testing the stove.
3. Turn all valves on the stove to the off position. Turn the Propane Tank off. Disconnect regulator from the tank. Reconnect regulator to the tank. Slowly turn tank on. Follow all instructions in the manual for leak testing the stove. If no leaks are found follow all instructions in the manual for lighting the appliance.

LATCHES ARE TOO LOOSE TO HOLD LID OR WINDSCREEN TIGHT.

Use a pair of pliers and bend the latch hook slightly to tighten up the fit. Try latching the lid and windscreen and if either it is still loose try bending the hook a little more.

MAX POT DIAMETER 10"
254MM DIAMÉTRE MAXIMUM DU POT

FOR OUTDOOR USE ONLY
UNIQUEMENT POUR L'EXTÉRIEUR

KEEP FOR FUTURE REFERENCE
GARDEZ POUR RÉFÉRENCE ULTÉRIEURE

Regulator Model
150/451, R329, RA329, RJ-A
JY70-003, JY95A7A (JY95-007)
RYQ Series (RYQF01)

3985 N 75 W, Hyde Park, UT 84318 • 800.650.2433 • www.CampChef.com

WARNING: Chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm are created by the combustion of propane.
Sport Utility, Big gASS Grill, Keg Roaster, Ultimate Roaster Are From the Makers of Camp Chef and Covered Under One or More of the Following Patents: 356714, 378646, 417120, 328547, 358057, 364772

DJ60LW -2 PARTS LIST

